


bürkert
FLUID CONTROL SYSTEMS

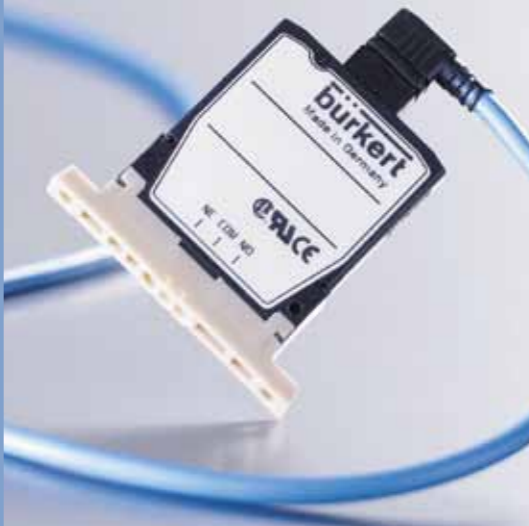

bürkert
FLUID CONTROL SYSTEMS

Product Overview MicroFluidics

Bürkert Fluid Control Systems
Christian-Bürkert-Straße 13-17
74653 Ingelfingen
Germany
Tel. +49 (0) 7940/10-0
Fax +49 (0) 7940/10-91 204
info@burkert.com
www.burkert.com

01 SOLENOID VALVES

02 PROCESS VALVES

03 PNEUMATICS

04 SENSORS

05

06 MASS FLOW CONTROLLERS

07 SOLENOID CONTROL VALVES



Content

3	Introduction
4	Fascination Bürkert
6	MicroFluidics Characteristics
8	Product Technologies
10	Valves
13	Pumps
14	Fluidic Connections
16	System Competencies
18	Contacts at Bürkert

Introduction

In LifeSciences, In-Vitro Diagnostics, Medical Devices and Analytical Chemistry, the general trend is towards both the increased automatization of procedures, accompanied with the miniaturization of the devices involved. This not only allows processes to be designed with considerably greater efficiency, it also opens up whole new fields of application. Bürkert with its particular segment MicroFluidics offers a product line tailored to the needs of this very specific market.

Whether it is for valves, pumps or individual system solutions, the entire product range is geared towards ensuring the controlled handling of even the smallest volumes of liquids. The devices have been designed with the following requirements foremost in mind:

- Miniaturization of the internal and external dimensions
- Modular construction taking the standard structure into account
- Quick, precise and reproducible response times
- High level of dependability
- Low power consumption

The following overview will make your search for the right products easier and is intended to be read as a supplement to the detailed data sheets available at www.burkert.com. Our colleagues are pleased to consult you in selecting the right product or system for your application.

Welcome to the Fascinating World of Fluid Control Systems

Measurement and control: When it comes to working with liquids and gases, we are at your side – as a manufacturer of sophisticated products, as a problem-solver with an eye for the big picture, and as a partner offering you reliable advice. Since we started in 1946, we have developed into one of the world's leading suppliers of Fluid Control Systems. At the same time we have kept our status as a family-owned business with a foundation of strong basic values to highlight the way we think and act.

EXPERIENCE

There are things which are not inherently yours. You have to gather them bit by bit. You receive them from others. And you constantly have to acquire them anew. That is what makes them so valuable. Experience is one of those things. For instance, because of our many years of experience with MicroFluidics, we can provide our extensive services to you – from consulting, development, and 3D CAD simulating to testing and after-sales service. Whether individual product solutions or a pioneering new system for the entire control process: Benefit from our experience.

COURAGE

Those who only work toward optimizing things that already exist will eventually reach the limits – technically, financially, or personally. In order to overcome these limits, courage is needed: The courage to be different and trust one's own ideas; the courage to venture into the unknown, searching for new ways to develop products that have never existed before. We have this courage. By pooling and utilizing our competencies across all sectors, you benefit from our cumulative knowledge of MicroFluidic systems – whether it is in Clinical Diagnostics or Industrial Analytics.

CLOSENESS


Some things we simply take for granted. Only when they are gone, do we realize how important these things really were. This applies in particular to closeness. Without closeness, it is very difficult to build relationships and a good understanding of one another. As an established medium-sized company, we know that. And that is why we are always there for you. Working with you, we develop the best possible solutions for your projects in the area of MicroFluidics. Our global presence in 35 locations enables us to press ahead with technical innovations for our customers around the world.

Bürkert Product Program

We are one of the few suppliers on the market to cover the complete control loop. Our current product range extends from solenoid valves through process and analytical valves to pneumatic actuators and sensors.



Bürkert offers a remarkable range of servo-assisted and direct acting solenoid valves. Read more about them in this brochure.

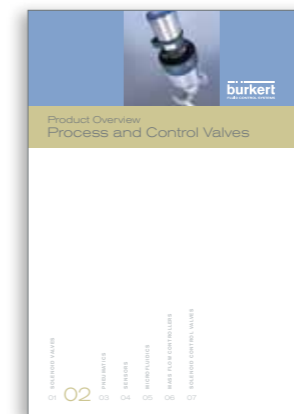

Bürkert offers unlimited modularity for process control with angle-seat, globe and diaphragm valves in the widest range of configurations.



Here you can find our product range of pneumatic valves, valve units and automation systems as well as information on our control cabinet building.



Here you can find our sensors, transmitters and controllers for measuring and controlling flow, temperature, pressure, level, pH/ORP and conductivity.



The brochure contains an overview of Bürkert miniature valves and micro pumps, which allow for precise and safe handling of small volumes of liquids.



This brochure provides technical background information as well as a detailed product overview for the mass flow controller and meter product range.



This brochure presents our solenoid control valves including their respective features, functions and typical applications.

MicroFluidics Characteristics

With more than 15 years of experience in the field of MicroFluidics, Bürkert is a competent partner of choice when it comes to devising solutions for the handling of even the tiniest volumes of liquids.

In order to meet the special demands derived from miniaturization and the particular area of application, the following criteria all form vital cornerstones in the development of new solutions:

Low Internal Volume

The more precious the resources are, the more efficiently they should be used. That is why Bürkert pays particular attention to minimizing the internal volume during the development of standard components and individual systems. This not only means that a system's cleanability is improved; it also maximizes the use of fluids flowing through the system.



Maximum Precision

In the world of microlitres, precision and reproducibility are an absolute must. Through innovative solutions and extremely precise manufacturing standards, Bürkert is able to meet the demand for both fast and reproducible response times as well as for long service lives of devices.

Outstanding Chemical Resistance

No matter if it is for cell suspensions, acids or highly concentrated solvents, Bürkert has a solution at hand with a broad range of materials for a wide spectrum of applications. Our chemical laboratory works with application specialists and machine tool experts to guarantee an optimal choice even for critical applications.




Excellent Cleanability

Particularly when handling biological media, cross contamination has to be prevented. Bürkert products offer excellent cleanability thanks to low dead volume design, optimized through-flow, as well as high-precision moulding.

Low Heat Transfer into the Medium

In order to avoid uncontrolled heat transfer into the medium, Bürkert rigidly keeps the solenoid and fluid chamber separate from each other. In addition, optionally integrated power-saving electronics can reduce the heat production.

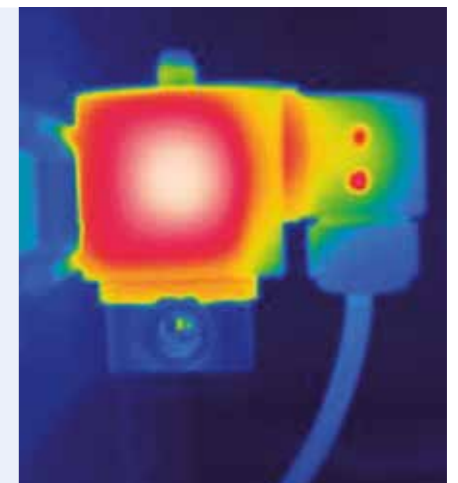

Flipper Valves



The core component in flipper valves is a metal lid vulcanized with elastomer. This pivoting "flipper" is housed in the fluid chamber and alternately closes one of the two valve seats.

As in valves with diaphragms, flipper valves provide a complete separation of medium and actuator. However, the switching action of the flipper creates no pump effect. In addition, the flipper valve technology allows for especially short and reproducible response times and an extended service life due to the lack of diaphragm flexing. This makes

this technology particularly suitable for precise dosing applications. Since the medium does not act on large areas of a diaphragm, flipper valves remain tight even at back pressures above the nominal pressure.

Characteristics:

- short and reproducible response times
- no pulsation
- low power consumption
- enclosed fluid chamber

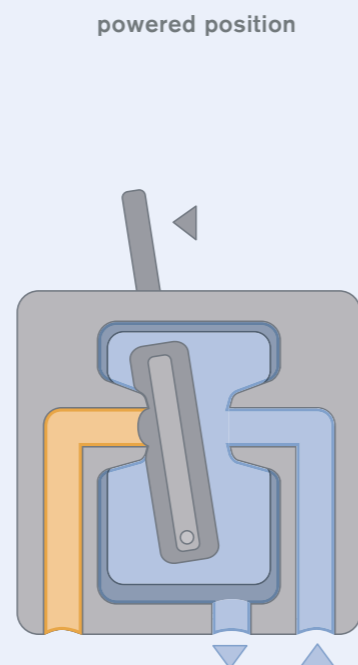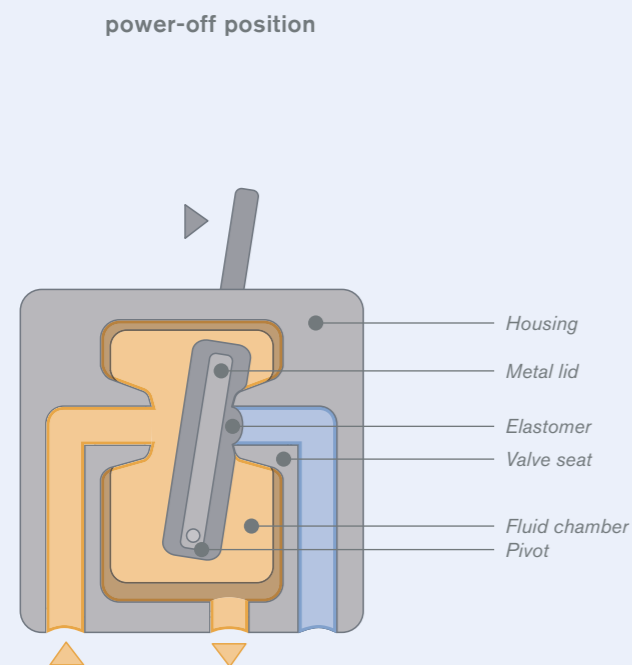

3/2-way valve flipper technology

Rocker Valves



The valve seats in rocker valves are in one plane and opened and closed by a switching rocker. Due to the extremely small amount of moving mass involved, the distinguishing feature of rocker valves is their particularly long service life.

Alongside the non-media-separated valves for pneumatic applications, the principle behind rocker valves also allows for the reliable separation of medium and actuator by way of a diaphragm. In contrast to plunger type valves with a diaphragm, the construction principle of rocker valves provides a secure

seal of the valve seats even if a high back pressure is applied. Due to the lack of gaps in the inner contour and the very good cleanability of the fluid chamber, the media-separated rocker valves are particularly well suited for use with biological media.

Characteristics:

- excellent cleanability
- minimal internal volume
- high back pressure tightness
- media separated from actuator

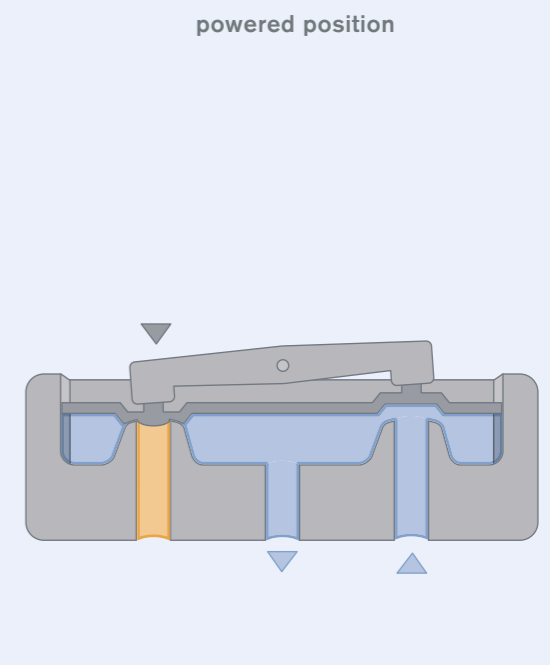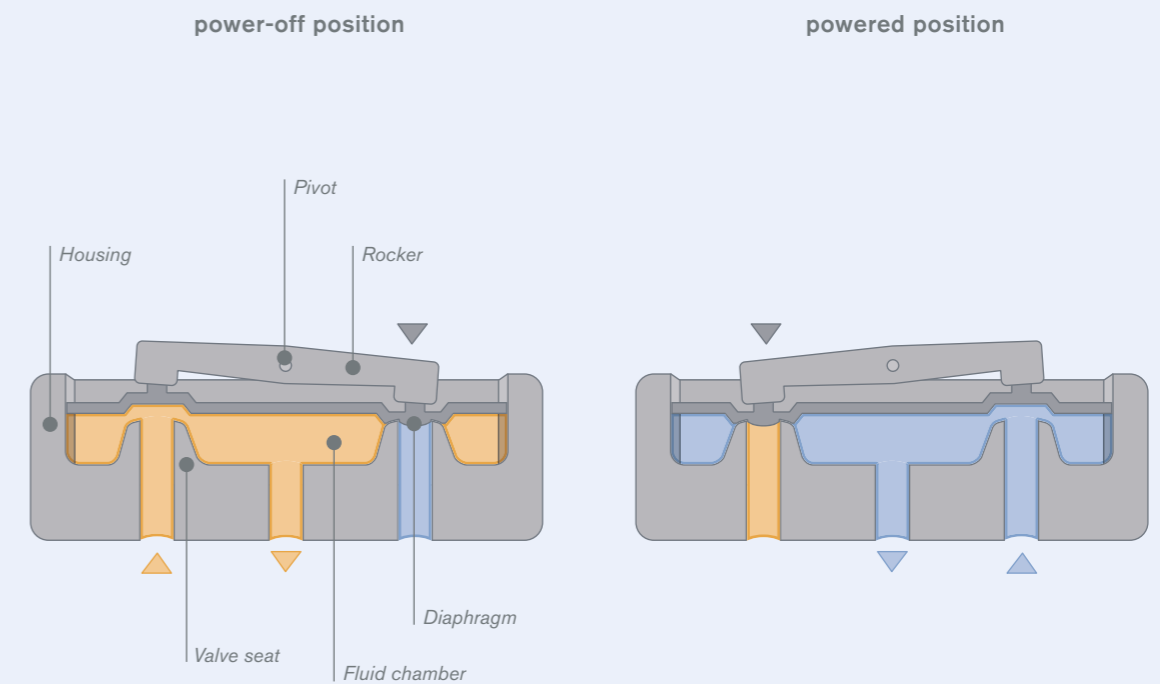

3/2-way valve rocker technology

Valves

Type	Principle		Orifice [mm]	Pressure ran- ge [bar] ([psi])	Add-on dimension [mm]	Housing material	Seal material
	Flipper	Rocker					
6650	●		0.4	Vac-7	4.5	PEEK	FFKM
			0.8	Vac-1			
6144	●		0.6	Vac-10	10	PPS	FKM
6624		●	0.8	Vac-5	10	PEEK, PPS	FFKM, FKM, EPDM
			1.6	Vac-2			
0127		●	1.5	Vac-2	16	PVDF, ETFE, PEEK	FFKM, FKM
			1.6	Vac-2			
6106		●	0.9	0-8	16	PA	FKM
			1.2	0-10			
			1.6	Vac-1			
			2.0	Vac-1			
6626		●	3	Vac-2	16	PEEK	FFKM
6628		●	2	Vac-5	22	PEEK, PPS	FFKM, FKM, EPDM
			3	Vac-3			
0121	●		2	0-6	32 resp. 35	PP, PTFE, PVC, PVDF, VA	FFKM, FKM, EPDM
			4	0-4			
			6	0-2			
			8	0-1			
0124	●		2	0-16	37	PP, PTFE, PVC, PVDF, VA	FFKM, FKM, EPDM
			3	0-10			
			4	0-5			
			5	0-4.5			

Detailed technical data can be found on the respective data sheet for each individual type. The chemical resistance table offers support in selecting the right seal and housing material. All documents are available at www.burkert.com.



Type 6650 – Direct-acting 2/2 or 3/2-way flipper valve

With a width of just 4.5 mm, type 6650 sets new industry standards. Along with its compact design, the 6650's extremely fast and high-precision switching makes it primarily ideal for use in dosing tasks in the microlitre range. Further advantages of the valve are not least its capability to handle pressures up to 7 bar (101 psi) and a service life of more than 50 million cycles.



Type 6144 – Direct-acting 3/2-way flipper valve

The medium separated type 6144 has been designed for general purpose use and is especially suitable in pneumatic applications. Alongside its compact form, the valve boasts a particularly long service life of more than 500 million cycles and can handle pressures of up to 10 bar (145 psi). It is also available as a latching version or with explosion protection type Ex-ia.



Type 6624 – Direct acting 2/2- or 3/2-way rocker valve

The new TwinPower actuator enables a radical reduction in size and footprint without compromises in performance. With only 10 mm pitch our media-separated rocker valve comes along with 1.6 mm orifice and 2 bar pressure resistance – the same performance data as the traditional 16 mm rocker valve.



Type 0127 – Direct-acting 2/2 or 3/2-way rocker valve

Bürkert's unique rocker valve still sets a standard for media-separated valves in the field of laboratory, medical and analytical devices. This valve combines low internal volume with minimal dead volume and impresses with a large variety of port connections and materials.



Type 6626 – Direct-acting 3/2-way rocker valve

The type 6626 is the bigger counterpart of the type 6624 using the TwinPower actuator as well. With pressures ranging from vacuum to 2 bar and an orifice of 3 mm, this technology allows for a valve with only 16 mm in width. An additional LED enables the status monitoring of the valve.



Type 6628 – Direct-acting 2/2 and 3/2-way rocker valve

The 22 mm valve complements the TwinPower family by using the same fluidic design as the proven and reliable 0127. The established rocker technology is characterized through full back pressure tightness, good rinsing capability and low internal volume. Type 6628 is available with different port connections, sealing and housing material to be able to adapt it to various applications.



Type 0121 – Direct-acting 2/2 or 3/2-way pivoted armature valve

Type 0121 has been developed especially for use with aggressive chemical substances and waste media. A robust design and high-class materials define the characteristics of this valve.



Type 0124 – Direct-acting 2/2 or 3/2-way pivoted armature valve

Type 0124 is especially suitable for the control of slightly aggressive or waste media, which require a separation of medium and actuator. Depending on the orifice, the valve is suitable for pressures up to 16 bar (232 psi), and an orifice of up to 5 mm allows for high flow rates.



Pumps

Type	Flow rate	Frequency input	Pressure	Body material	Sealing material	Self-priming	Inlet/ outlet valves
7604	min. 4.5 ml*	max. 40 Hz	max. 0.2 bar	PEEK	FFKM	●	passive
7616	1-5 µl/stroke	max. 15 Hz	max. 2.5 bar	PEEK	FFKM	●	active

* at 35 Hz



Type 7604 – Micro diaphragm pump

The self-priming diaphragm pump is ideal for continuous low flow liquid applications. Since only the high-class materials PEEK and FFKM get in contact with the fluid, the pump can also be used for aggressive chemicals. The mounting pitch of 11 mm allows for an extremely compact design and ease of mounting, with standard bodies designed for surface mount (manifold) or tube connections. The low power consumption of just 1.5 watt means the pump can be easily incorporated into battery-powered mobile devices. The flow rate can be adjusted by varying the frequency input to fit the specific performance requirements. Due to the high maximum frequency of 40 Hz, the pulsation is reduced to a minimum.




Type 7616 – Micro dosing unit

The micro dosing unit 7616 consists of a diaphragm pump and active inlet and outlet valves. The components are assembled on a manifold in order to keep the internal volume to a minimum. The delivered volume can be adjusted via the cycle rate (max. 850 cycles/min) and stroke adjustment (0.5 µl ... 5 µl). Thanks to its high reproducibility (< ± 2%), the unit is ideal for precise dosing of the smallest quantities of liquids. PEEK and FFKM are the only materials that come into contact with the media. This facilitates the use with aggressive media. The micro dosing unit can be easily operated via three digital channels. A matching controller, which can be configured via a PC, is also available.

Standard Manifolds

As well as customer-specific manifolds, Bürkert also offers a range of standard solutions for the types 6144, 6604, 0127 and 6628. Via a respective common collecting channel, mixer or distributor functions can be implemented. In addition, the 3-way version also provides a vent.


Suitable valve type	Number of stations	Material	Circuit function	Connection	Features
6144	1-6	Aluminium	3/2-way	M3/M5	with venting channel for pneumatics
6144 and 6604, 11 mm mounting pitch	2-10	PEEK	2/2-way	UNF 1/4-28	all ports in one plane
0127	2-16	Aluminium	3/2-way	G1/8 + M5	all ports in one plane
0127	2-8	PEEK	2/2-way	UNF 1/4-28	all ports in one plane
0127	2-12	PEEK	2/2-way	G1/8	all ports in one plane
0127	2-12	PPS	2/2-way	G1/8	all ports in one plane
0127	2-12	PTFE	2/2-way	G1/8	all ports in one plane
6628	2-10	Aluminium	3/2-way	G1/8	all ports in one plane
6628	2-10	Aluminium	2/2-way	G1/8	all ports in one plane

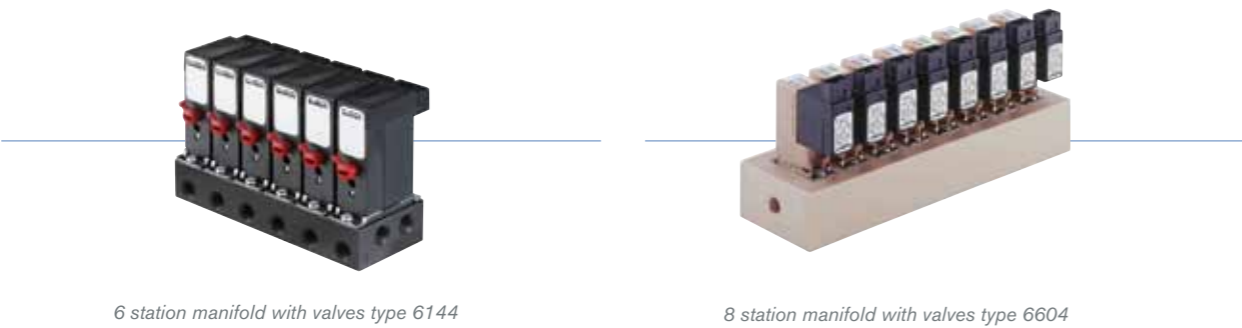

UNF Flat Bottom Ports


In the MicroFluidics segment, the flat bottom connection with UNF* threads has become the standard connecting technology. Alongside the compact design, this technology in combination with the appropriate fittings offers the following benefits:

- dead volume-free connection
- reliable sealing without additional sealing material or O-rings
- medium only comes into contact with tube and ferrule
- simple assembly without tools
- repeatable disconnection and reconnection

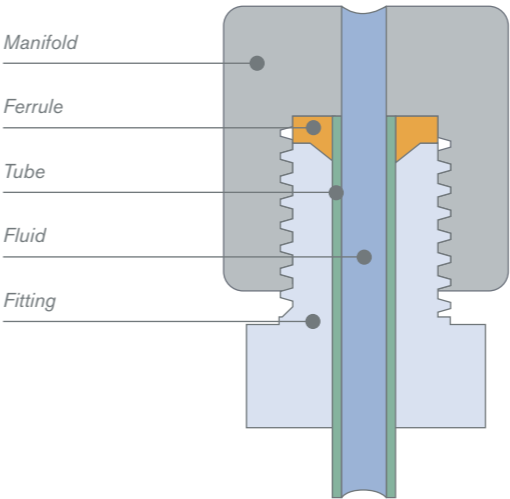

For the common connection size UNF 1/4-28, Bürkert offers standard devices and customer-specific solutions together with the appropriate fittings, ferrules and tubes.

* Unified Fine Thread in accordance with ASME/ANSI B1.10M – 2004

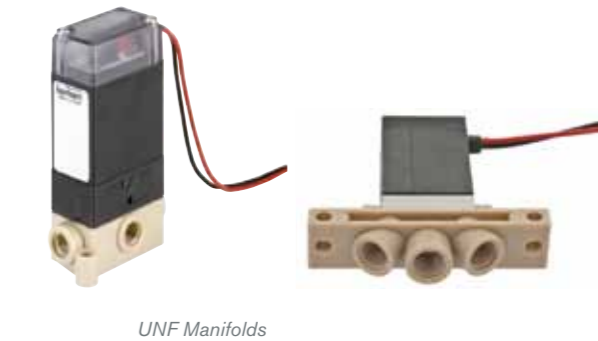

Version		PP	PPS	PEEK	ETFE	PTFE
Fitting standard: 1/8" and 1/16"		•	•	•		
Fitting short version: 1/8" and 1/16"		•	•	•		
Ferrule 1/8" and 1/16"					•	
Tube 1/16": 1.6 mm x 0.8 mm / 1.6 mm x 1.0 mm						•
Tube 1/8": 3.2 mm x 1.6 mm						•

System Solutions

Systemhaus crews worldwide with many years of experience in the business of developing systems enable us to develop and implement tailor-made solutions to meet your demands. The engineers and scientists are on hand to offer you competent consultation.

The spectrum of the individual solutions is exceptionally wide and extends from manifolds, injection moulded plastic parts, integration of additional components, electronics, software, specific fluidic interfaces all the way up to the use of customer-specific fieldbus technology.

In this way we can ensure that you receive the perfect solution for your application. The main focus is put on optimization of the fluidics in terms of cleanability, internal volume and minimized dead volume as well as higher integration of functions into the system. Furthermore, through both the geometric dimensions and selected interfaces, the system is guaranteed to suit perfectly into the later field of application.

System	Manifold	Injection moulded parts	Integration of added components	Customer-specific interfaces	Electronics	Software	Fieldbus technology
5-station manifold type 6606 for rinsing cycle	•						
Compact 16-station dosing head type 6650	•						
Seal gas supply for turbomolecular pumps	•			•			
Endoscope, disinfection and leakage test system	•		•	•			
25-station dosing and mixing unit for DNA synthesizer	•			•	•	•	
16-fold precision pressure controller with I²C-bus	•		•	•	•	•	•
Water supply and conditioning unit in dental chairs	•	•	•				



5-station manifold type 6606 for rinsing cycle

Each manifold is designed according to the individual needs, making it possible to keep internal volume to a minimum as well as allowing for optimal alignment with its later place of application.




Compact 16-station dosing head type 6650

With a width of 4.5 mm, type 6650 perfectly suits the raster of a 384-well microtiter plate.



Seal gas supply for turbomolecular pumps

The integration into existing systems is made possible through both the individual manifold as well as through customer-specific fluidic interfaces.

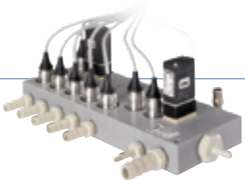

Endoscope disinfection and leakage test system

The integration of different components greatly increases the system's functionality.



25-station dosing and mixing unit for DNA synthesizer

Alongside the fluidics, Bürkert can also provide you with the electronics and software to manage the systems.



16-fold precision pressure controller with I²C-bus

For the smooth exchange of data, customer-specific data interfaces can be implemented in addition to the standard fieldbus protocols.



Water supply and conditioning unit in dental chairs

Besides the conventional machining, customer-specific parts can also be manufactured by injection moulding in order to optimize the system from a technical and economical point of view.

Bürkert – Close to You

Europe

Austria
Bürkert-Contromatic G.m.b.H.
Diefenbachgasse 1-3
AT-1150 Wien
Tel: +43 (0)1-894 13 33
Fax: +43 (0)1-894 13 00
E-mail: info@buerkert.at

Belgium
Bürkert Contromatic BV
Minervum 7220
NL-4817 ZJ Breda / Netherlands
Tel: +32 (0) 3 325 89 00
Fax: +32 (0) 3 325 61 61
E-mail: info@burkert.nl

Czech Rep.
Bürkert-Contromatic G.m.b.H. organizacni
slozka
Krenova 35
CZ-602 00 Brno
Tel: +420 543-25 25 05
Fax: +420 543-25 25 06
E-mail: obchod@burkert.cz

Denmark
Bürkert-Contromatic A/S
Hørkær 24
DK-2730 Herlev
Tel: +45 44-50 75 00
Fax: +45 44-50 75 75
E-mail: info.dk@burkert.com

Finland
Bürkert Oy
Atomitie 5
FI-00370 Helsinki
Tel: +358 (0)207 412 550
Fax: +358 (0)207 412 555
E-mail: sales.fi@burkert.com

France
BURKERT CONTROMATIC SAS
Rue du Giessen
FR-67220 Triembach au Val
Tel: +33 (0)388-58 91 11
Fax: +33 (0)388-57 20 08
E-mail: burkert.france@burkert.com

Germany
Ingelfingen – Sales Center
Bürkert GmbH & Co. KG
Christian-Bürkert-Straße 13-17
DE-74653 Ingelfingen
Tel: +49 (0)7940/10-91 111
Fax: +49 (0)7940/10-91 448
E-mail: info@buerkert.de

Berlin
Bürkert GmbH & Co. KG
Paradiesstraße 206 b
DE-12526 Berlin
Tel: +49 (0)30/679717-0
Fax: +49 (0)30/679717-66

Hannover
Bürkert GmbH & Co. KG
Rendsburger Straße 18
DE-30659 Hannover
Tel: +49 (0)511/90276-0
Fax: +49 (0)511/90276-66

Europe, continued

Dortmund
Bürkert GmbH & Co. KG
Kattsundsgatan 27
DE-58708 Menden
Tel: +49 (0)2373/9681-0
Fax: +49 (0)2373/9681-50

Frankfurt
Bürkert GmbH & Co. KG
Am Flugplatz 27
DE-63329 Egelsbach
Tel: +49 (0)6103/9414-0
Fax: +49 (0)6103/9414-66

Stuttgart
Bürkert GmbH & Co. KG
Ulmer Straße 4
DE-70771 Leinfelden-Echterdingen
Tel: +49 (0)711/45110-0
Fax: +49 (0)711/45110-66

München
Bürkert GmbH & Co. KG
Elsenheimerstraße 47
DE-80687 München
Tel: +49 (0)89/829228-0
Fax: +49 (0)89/829228-50

Italy
Bürkert Contromatic Italiana S.p.A.
Centro Direzionale „Colombirola“
Via Roma, 74
IT-20060 Cassina De' Pecchi (Mi)
Tel: +39 02-959 071
Fax: +39 02-959 07 251
E-mail: info@buerkert.it

Netherlands
Bürkert Contromatic BV
Minervum 7220
NL-4817 ZJ Breda
Tel: +31 (0) 88 12 67 300
Fax: +31 (0) 88 12 67 350
E-mail: info@burkert.nl

Norway
Bürkert-Contromatic A/S
Hvamstuppen 17
NO-2013 Skjetten
Tel: +47 63-84 44 10
Fax: +47 63-84 44 55
E-mail: info@burkert.no

Poland
Burkert-Contromatic GmbH Oddział w Polsce
Bernardynska street 14 a
PL-02-904 Warszawa
Tel: +48 (0)22-840 60 10
Fax: +48 (0)22-840 60 11
E-mail: buerkert@buerkert.pl

Portugal
Tel: +351 212 898 275
Fax: +351 212 898 276
E-mail: portugal@burkert.com

Spain
Bürkert Contromatic S.A.
Avda. Barcelona, 40
ES-08970 Sant Joan Despi, Barcelona
Tel: +34 93-477 79 80
Fax: +34 93-477 79 81
E-mail: spain@burkert.com

Europe, continued

Sweden
Bürkert-Contromatic AB
Kattsundsgatan 27
SE-211 26 Malmö
Tel: +46 (0)40-664 51 00
Fax: +46 (0)40-664 51 01
E-mail: info.se@burkert.com

Switzerland
Bürkert-Contromatic AG Schweiz
Bösch 71
CH-6331 Hünenberg ZG
Tel: +41 (0)41-785 66 66
Fax: +41 (0)41-785 66 33
E-mail: info.ch@burkert.com

Turkey
Burkert Contromatic Akiskan Kontrol
Sistemleri Ticaret A.S.
1203/8 Sok. No:2-E
TR-Yenisehir, Izmir
Tel: +90 (0)232-459 53 95
Fax: +90 (0)232-459 76 94
E-mail: infoturkey@burkert.com

United Kingdom
Burkert Contromatic Limited
Brimscombe Port Business Park
Brimscombe, Stroud
Glos, GL5 2QQ / UNITED KINGDOM
Tel: +44 (0)1453-731 353
Fax: +44 (0)1453-731 343
E-mail: sales.uk@burkert.com

Africa

South Africa
Bürkert Contromatic (Proprietary) Limited
233 Albert Amon Road
Millennium Business Park
Meadowdale,
Germiston
(Postal: P.O. Box 26260, East Rand 1462)
SOUTH AFRICA
Tel: +27 (0)11-574 60 00
Fax: +27 (0)11-454 14 77
E-mail: sales.za@burkert.com

Middle East

Bürkert-Contromatic AG,
International Middle East (RAKFTZ Branch)
PO Box 17015, RAK Free Trade Zone
Ras Al Khaimah
United Arab Emirates
Tel: +971 7207 6696
Fax: +971 7207 6695
E-mail: sales@burkert.com

Asia

China
Burkert Contromatic (Suzhou) Co. Ltd.
Systemhaus
Building No. 5, No.128 Fangzhou Road
SIP Suzhou P.R. CHINA, 215024
Tel: +86 0512 6265 9230
Fax: +86 0512 6265 9773

Burkert Contromatic (Shanghai), Co., Ltd.
(logistic and warehouse for BC China)
Floor 2, block 6, 166 Mingdong Road
Pudong New District
Shanghai 201209, P.R. CHINA
Tel: +86 21-5863 9990
Fax: +86 21-5863 9968
E-mail: info.chn@burkert.com

Beijing
Burkert Contromatic (Shanghai), Co., Ltd.
Room A 1708, Luowa Building, No.203
Er Ou Lizezhongyuan, Wangjing,
Chaoyang District
Beijing P.R. CHINA, 100102
Tel: +86 10 6439 9783, 6439 9793
Fax: +86 10 6439 9612

Chengdu
Burkert Contromatic (Shanghai), Co., Ltd.
B zone, 2nd floor,
DongFangGuangYi office building
33, Hua Tai Road
LongTan city industrial zone, 2nd section,
East 3rd ring Rd.
Chengdu, CHINA 610051
Tel: +86 28 8425 1434, 8425 1435
Fax: +86 28 8425 1560

Guangzhou
Burkert Contromatic (Shanghai), Co., Ltd.
4F-1, Block B, No.1 Innovation Building
No.63 Chuang Qi Road
Shilou Town, Panyu District
Guangzhou P.R. CHINA, 511447
Tel: +86 20 3927 0268, 3927 0260
Fax: +86 20 3927 0269

Shanghai
Burkert Contromatic (Shanghai), Co., Ltd.
Room 501/502 Xin Gai Nian Mansion
No.39 Wu Zhong Road
Shanghai P.R. CHINA, 200233
Tel: +86 21 6486 5110
Fax: +86 21 6487 4815

Suzhou
Burkert Contromatic (Shanghai), Co., Ltd.
Unit 11-12, 5th Floor, Block A
No.5 Xinghan Street
SIP Suzhou P.R. CHINA, 215021
Tel: +86-512-6265 9881
Fax: +86-512-6265 9882

Hong Kong
Burkert Contromatic (China/HK) Limited
Unit K, 9/Floor, Kwai Shun Industrial Centre
No. 51-63 Container Port Road
Kwai Chung, N.T., HONG KONG
Tel: +852 2480 1202
Fax: +852 2418 1945
E-mail: info.hkg@burkert.com

India
Burkert Contromatic PVT Ltd
No M6, Dr Vikram Sarabhai Instronic (VSI) Estate,
Type II, Thiruvannmyur
Chennai 600 041, INDIA
Tel: +91 (0)44-2454 0100
Fax: +91 (0)44-2454 0099
E-mail: sales.in@burkert.com

Asia, continued

Japan
Burkert Ltd.
1-12-15, Suidou, Bunkyo-ku
Tokyo 112-0005, JAPAN
Tel: +81 (0)3-5804-5020
Fax: +81 (0)3-5804-5021
E-mail: info.jp@burkert.com

Korea
Burkert Contromatic Korea Co., Ltd.
C-401, Micro Office Bldg. 554-2
Gasam-Dong, Keumcheon-Gu
Seoul 153-803, KOREA
Tel: +82 (0)2-3462 5592
Fax: +82 (0)2-3462 5594
E-mail: info.kor@burkert.com

Malaysia
Burkert Contromatic Singapore Pte Ltd
2F-1, Tingkat Kenari 6
Sungai Ara
11960 Penang, MALAYSIA
Tel: +60 (0)4-643 5008
Fax: +60 (0)4-643 7010
E-mail: info.sin@burkert.com

Philippines
Burkert Contromatic Philippines, Inc.
8467 West Service Road, Km. 14, Sunvalley
South Superhighway, Parañaque City, 1700
Metro Manila, PHILIPPINES
Tel: +63 (0)2-7766071 / 7764384
Fax: +63 (0)2-7764382
E-mail: info.rp@burkert.com

Singapore
Burkert Contromatic Singapore Pte Ltd
51 Ubi Avenue 1, #03-14
Paya Ubi Industrial Park
Singapore 408933, SINGAPORE
Tel: +65 6844 2233
Fax: +65 6844 3532
E-mail: info.sin@burkert.com

Taiwan
Burkert Contromatic Taiwan Ltd.
9 F, No. 32, Chenggong Road, Sec. 1,
Nangang District
Taipei, TAIWAN 115, R.O.C.
Tel: +886 (0)2-2653 7868
Fax: +886 (0)2-2653 7968
E-mail: info.rc@burkert.com

Pacific

Australia
Bürkert Contromatic Australia Pty Ltd
Tel: 1300 888 868
Fax: 1300 888 076
E-mail: sales.au@burkert.com

Bürkert Sydney
15 Columbia Way
Norwest Business Park
Baulkham Hills NSW 2153

Bürkert Melbourne
Suite 49, UniPark
Building 4, 195 Wellington Road
Clayton VIC 3168

Bürkert Brisbane
Unit 1, 88 Brandl Street
Brisbane Technology Park
Eight Mile Plains QLD 4113

Bürkert Perth
Unit 8, 1st Floor
85 Reid Promenade
Joondalup WA 6027

Pacific, continued

South Australia
Innovation House
First Avenue
Mawson Lakes SA 5095

New Zealand
Bürkert Contromatic New Zealand Ltd
Tel: 0800 BURKERT
Fax: 0800 33 33 77
E-mail: sales.nz@burkert.com

Bürkert Auckland
44 Rennie Drive
Airport Oaks, Auckland 2022

NAFTA

Canada
Burlington Headquarters
Bürkert Contromatic Inc.
5002 South Service Road
Burlington, Ontario L7L 5Y7, CANADA
Tel: +1 905-632 30 33
Fax: +1 905-632 38 33
E-mail: sales.ca@burkert.com

Montreal Sales Center
Bürkert Contromatic Inc.
8104 Trans Canada Highway
St. Laurent, Quebec H4S 1M5 , CANADA
Tel: +1 514-336 9033
Fax: +1 514-336 9034

USA
Charlotte Headquarters
Burkert Contromatic Corp.
2915 Whitehall Park Drive, Suite 650
Charlotte, NC 28273 , USA
Tel: +1 800-325 1405
Fax: +1 949-223 3198
E-mail: marketing-usa@burkert.com

West Coast Sales Facility
2572 White Road
Irvine, CA 92614 , USA
Tel: +1 800-325 1405
Fax: +1 949-223 3198

Charlotte Systemhaus
2915 Whitehall Park Drive, Suite 100
Charlotte, NC 28273 , USA
Tel: +1 800-325 1405
Fax: +1 949-223 3198

Engineering Division
2915 Whitehall Park Drive, Suite 200
Charlotte, NC 28273 , USA
Tel: +1 800-325 1405
Fax: +1 949-223 3198

Latin America

Argentina
Bürkert-Contromatic Argentina S.A.
Uruguay 2602, Centro Uruguay Norte,
PB. Oficina 1, (B1643EKP) Beccar,
Pcia. de Buenos Aires, ARGENTINA
Tel: +54 (0)11-5648-6350
Fax: +54 (0)11-5648-6355
E-mail: contacto.argentina@burkert.com

Brazil
Bürkert-Contromatic Brasil Ltda.
Rua Américo Brasiliense, 2069
Chacara Santo Antônio
04715-005 São Paulo - SP BRAZIL
Tel: +55 (0)11-2186 1155
Fax: +55 (0)11-2186 1165
E-mail: pedidos.brasil@burkert.com